


Docomo iNEX HyperSIM V2.6 User Manual

Please install as below for the first time

1. Follow the instruction on Packing. Combine your SIM card and HyperSIM as the picture (There is no double side tape on V2.5)

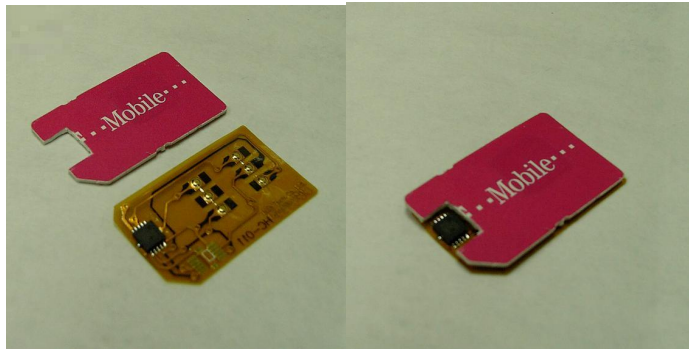


2. Insert the Combined SIM card to Docomo phone. Turn on Docomo phone and set it to GSM/GPRS Mode ◦ Select **Menu -> Setting-> Int'l roaming set -> 3G/GSM setting-> GSM/GPRS**

3. Insert Combined SIM card to a regular 2G phone (Nokia Motorola SONY..). **You can find the phone shows the version of HyperSIM** as the picture

* If you use a 3G regular phone, set to **GSM mode**



(You can insert the SIM card to a regular 2G phone and get the Signal directly, no combined SIM required)

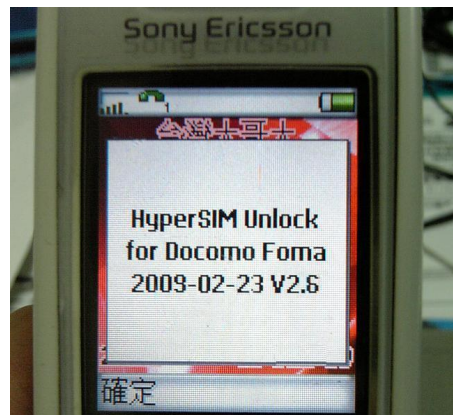

Please turn off the phone after step 3.

4. Insert Combined SIM to Docomo phone, it will get a GSM Signal and connect to the network after power on.

Remark :

1. Docomo phone may show "OUT" after switching 3G to GSM. (Default setting is 3G at Docomo phone). Please follow Step 2 and 4 to setup it.
2. Docomo phone just can make voice/video call, can not receive any call in 3G mode.
3. **When Docomo phone cannot connect to the network anymore, it will try to reconnect to the net work. If still out, it will show "Signal Failed" . Please setup up again as Step 3 and4. you also can reset HyperSIM before setting up.**

Set 66666666 as PIN code, will reset HyperSIM